Ergotech A Div of Teknion Ltd. PRODUCT: LIVELLO ELECTRIC HEIGHT ADJUSTABLE TABLE with STANDARD SWITCH DOCUMENT: USER INSTRUCTION GUIDE

IMPORTANT: READ INSTRUCTIONS BEFORE OPERATING TABLE

HOW TO ADJUST THE TABLE:

General Operation:

Press and hold the <u>DOWN</u> or <u>UP</u> arrow button to move the table to the desired height.



SETUP INSTRUCTIONS AND TROUBLESHOOTING TIPS

Initialization Procedure:

When you are using the table for the first time, you must INITIALIZE the table legs.


- Adjust the table to the lowest position and release the switch.
- Press and hold the <u>DOWN</u> button for 10 seconds. The legs should move up and down a small distance to indicate that the command has been received.
- Adjust the table to the highest position and back down to the lowest position twice in order to establish the full range of the table. The table is now ready for normal use.


Troubleshooting:

- If the table legs become un-level you must REINITIALIZE the system as described above.
- Ensure there are no obstructions in either the up or down direction.
- If the legs are not operating properly, it may be necessary to press the DOWN button twice to start the initialization process.

Monthly Maintenance:

• It is recommended that the table be REINITIALIZED once every month.

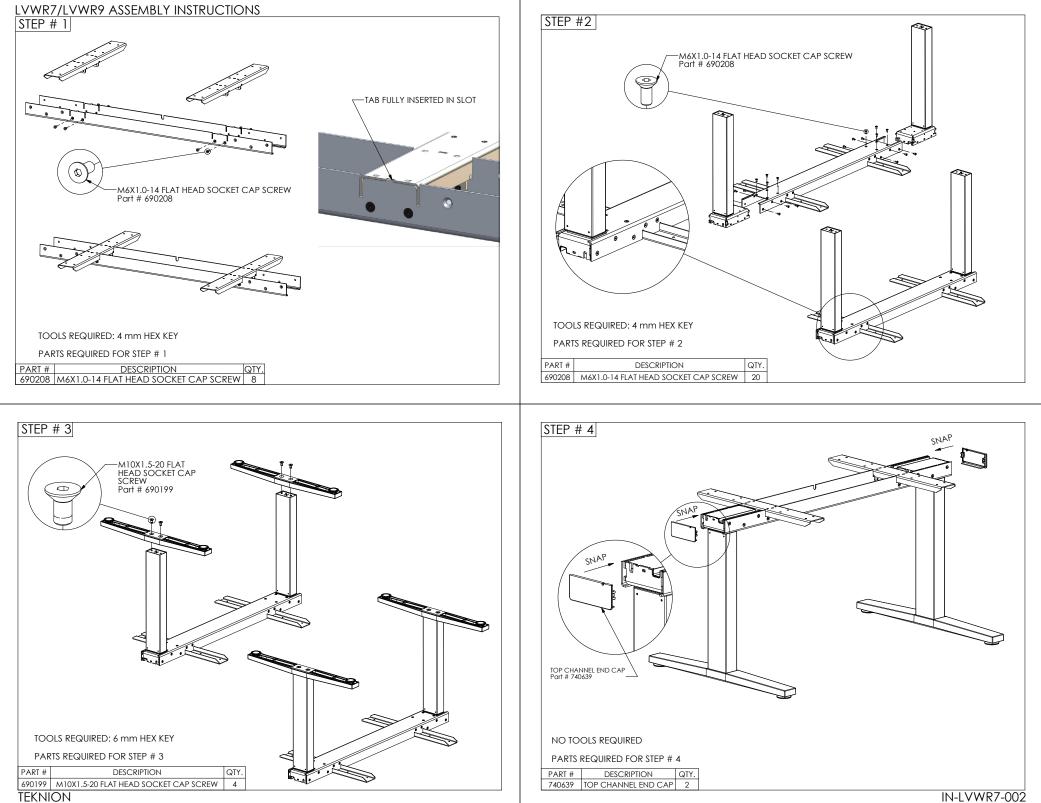

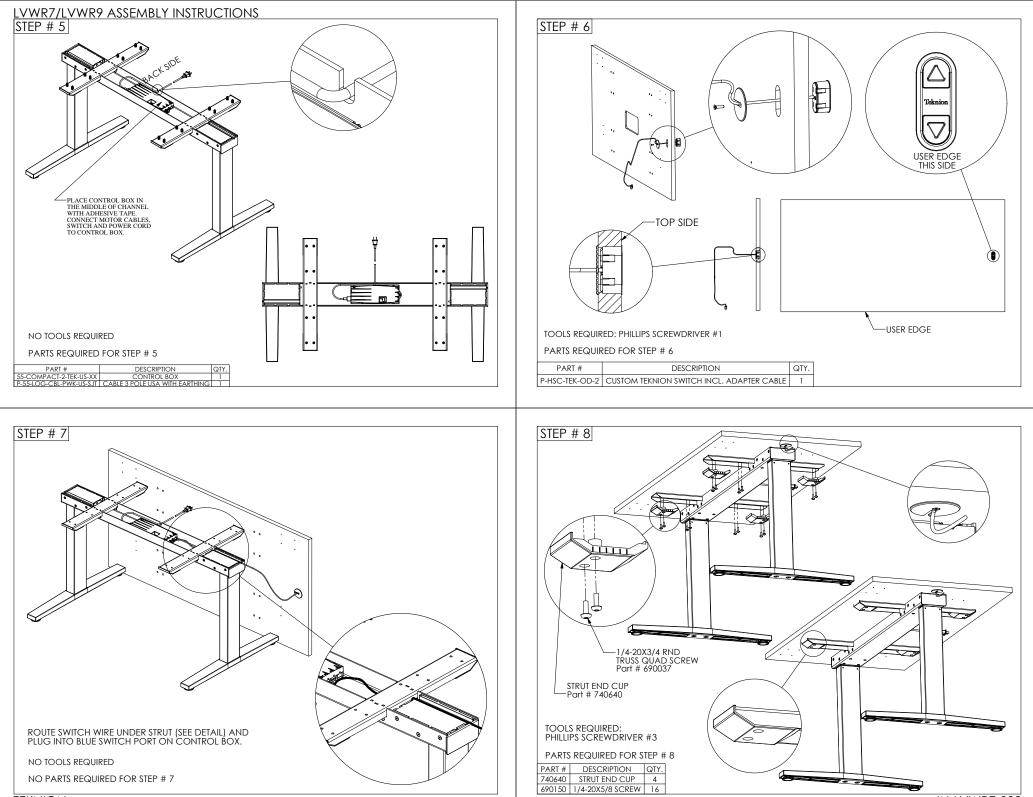

TEKNION

IN-LVWR7-002